



DISCRETION:

- 1. SWITCH FOR “OFF,LOW BRIGHTNESS, HIGH BRIGHTNESS”**
- 2. LENS**
- 3. WEAVERBASE KNOB**
- 4. HEX SCREWS**
- 5. ELEVATION ADJUSTMENT SCREW**
- 6. WINDAGE ADJUSTMENT SCREW**
- 7. LOCKING SCREWS**

INSTRUCTION TO DUAL-BRIGHTNESS RED DOT SIGHT.

- ❖ This tubeless-design reflex lens aperture provides a wide field of view. Suitable for rapid-firing or shooting of moving targets besides normal shooting.
- ❖ This red dot contains a separate switch with 3 steps for OFF, LOW BRIGHTNESS HIGH BRIGHTNESS. When the switch turned to “OFF” , Power is off. when turning to “L” and “H” ,power is on and brightness of the dot changes from “LOW” to “HIGH” .

INSTALLING BATTERY:

Using the Allen (provided in package) wrench to remove two hex screws (4). Turn the sight upside down to remove the bottom part of sight (weaver base). Replace it with 3V lithium battery (CR2032). Your red dot sight comes with a spare battery included inside the box.

MOUNTING:

Your red dot sight fits standard weaver base. Simply uncrew the weaver base knob (3) and place the sight over weaver base on top of your gun and tighten it firmly.

WINDAGE AND ELEVATION ADJUSTMENT:

Before you make any adjustment, make sure using the flat screw driver (provided in package) loosening two locking screws (7) to avoid damage of merchandise. Using the flat screw driver to adjust elevation adjustment screw (5) and windage adjustment screw (6). Tighten two locking screws (7) after adjustment finished.

CAUTION: Looking direct at the sun through this sight may cause permanent eye damage.